






CRANK QUICK START

 Highly specialized tools and supplies are required for the installation of your CYBREI components. We recommend that you have a qualified bicycle mechanic install your CYBREI components.

TOOLS   

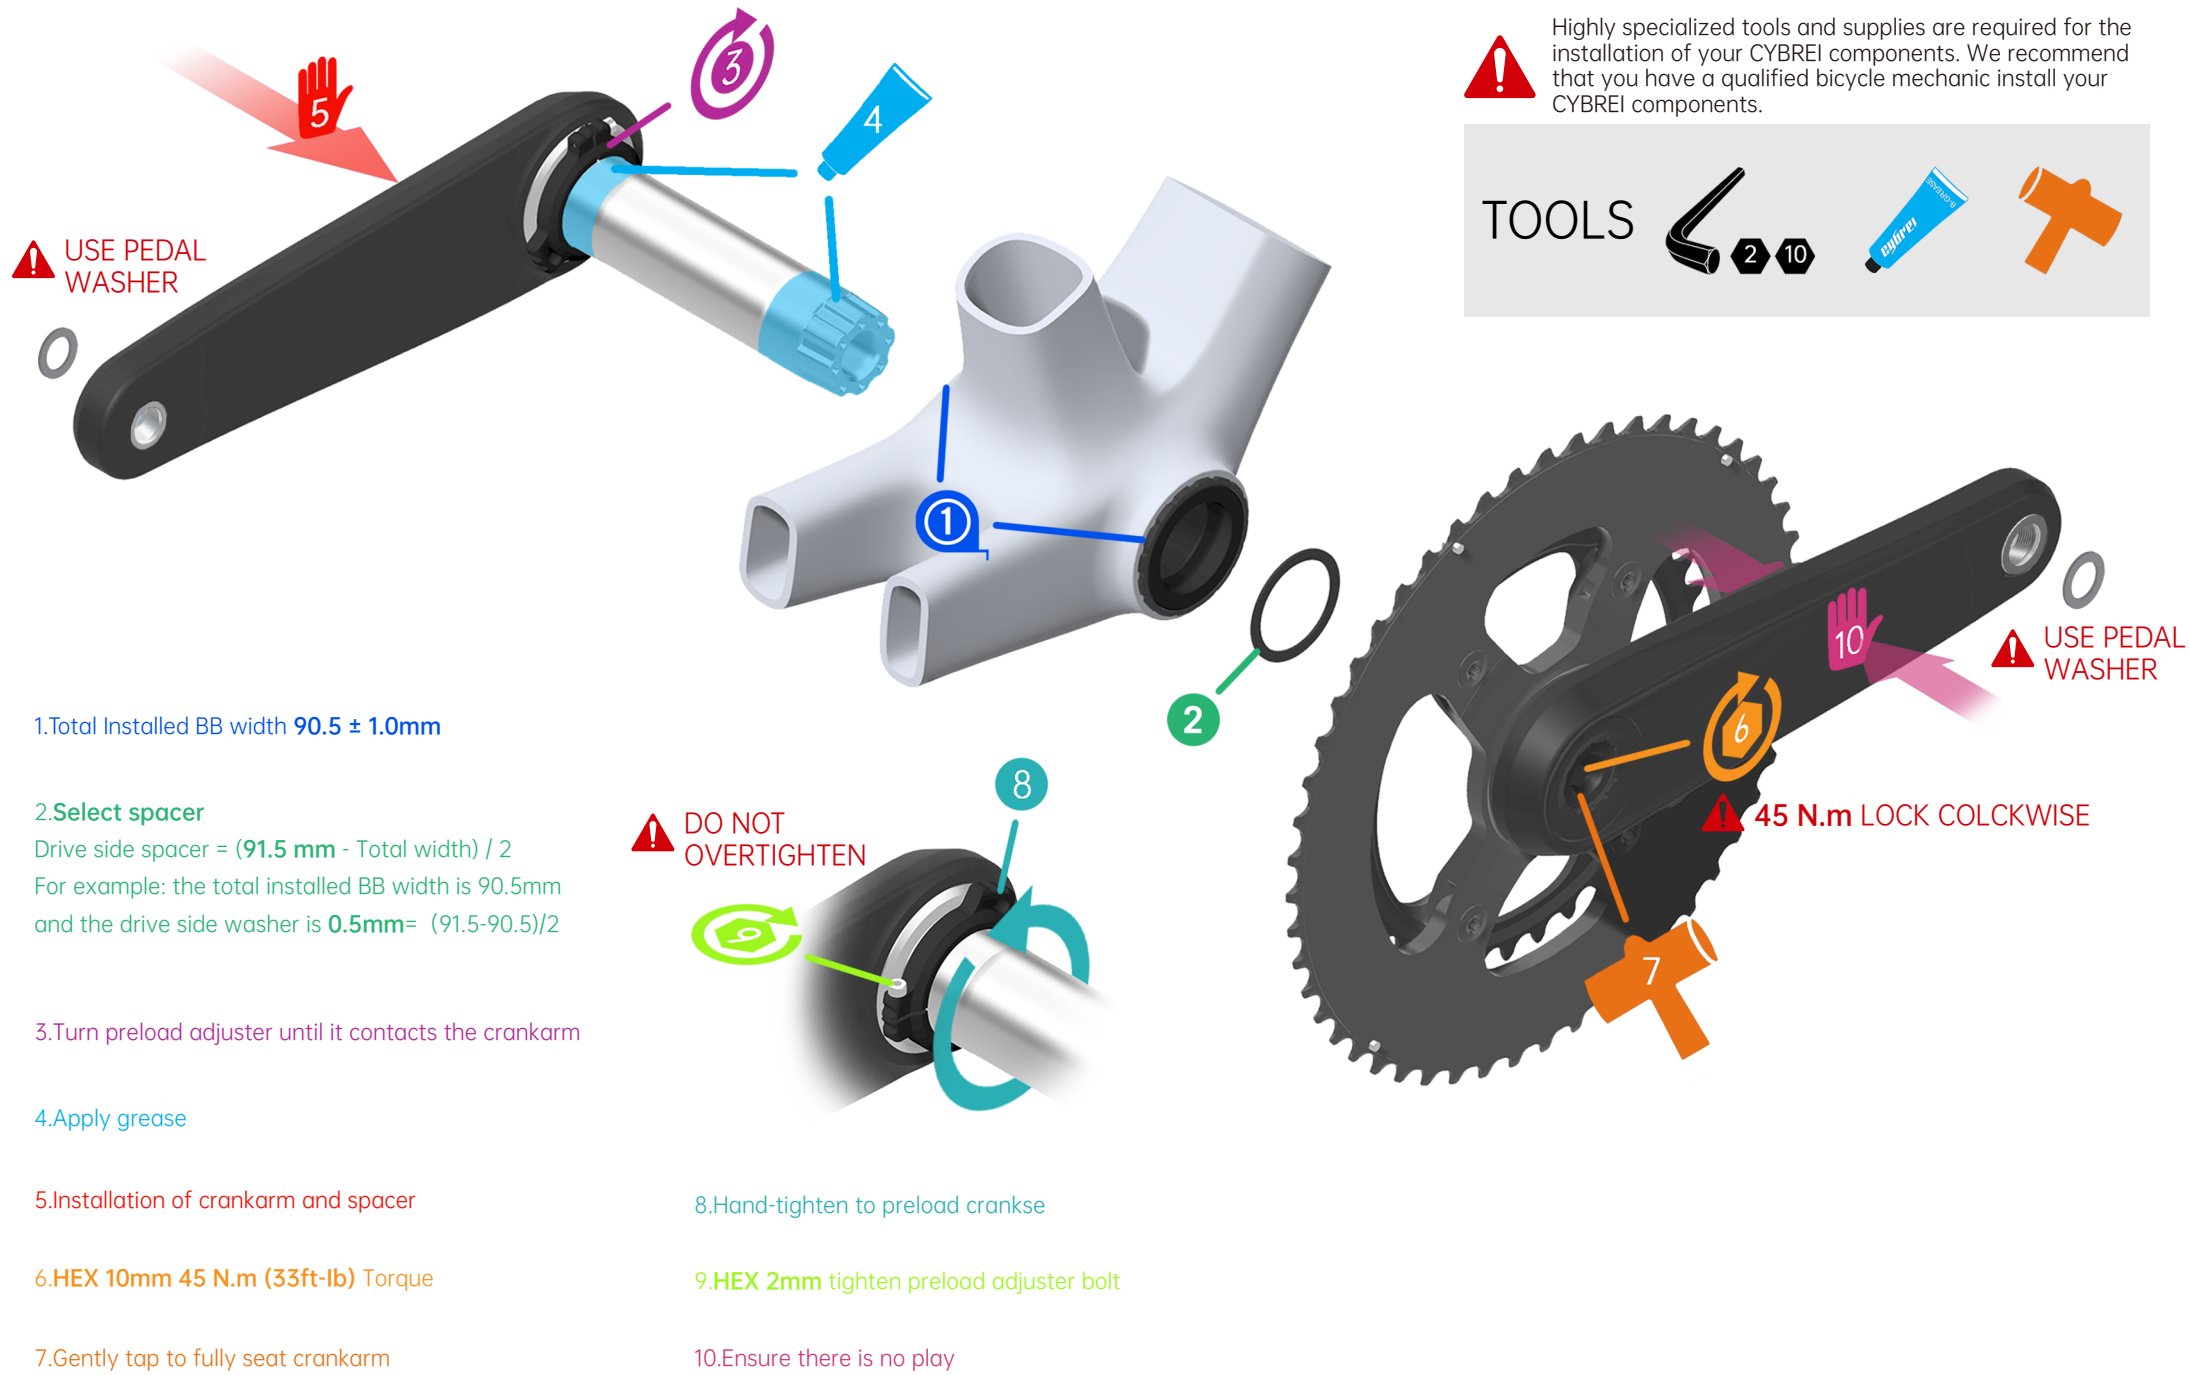

 USE PEDAL WASHER

 USE PEDAL WASHER

 DO NOT OVERTIGHTEN

 45 N.m LOCK COLCKWISE

1.Total Installed BB width **90.5 ± 1.0mm**

2.Select spacer
 Drive side spacer = $(91.5 \text{ mm} - \text{Total width}) / 2$
 For example: the total installed BB width is 90.5mm and the drive side washer is 0.5mm = $(91.5-90.5)/2$

3.Turn preload adjuster until it contacts the crankarm

4.Apply grease

5.Installation of crankarm and spacer

6.HEX 10mm 45 N.m (33ft-lb) Torque

7.Gently tap to fully seat crankarm

8.Hand-tighten to preload crankse


9.HEX 2mm tighten preload adjuster bolt

10.Ensure there is no play

CRANK QUICK START

! 安装 CYBREI 组件需要非常专业的工具和用品。我们建议您让专业的自行车技工安装 CYBREI 组件。

工具

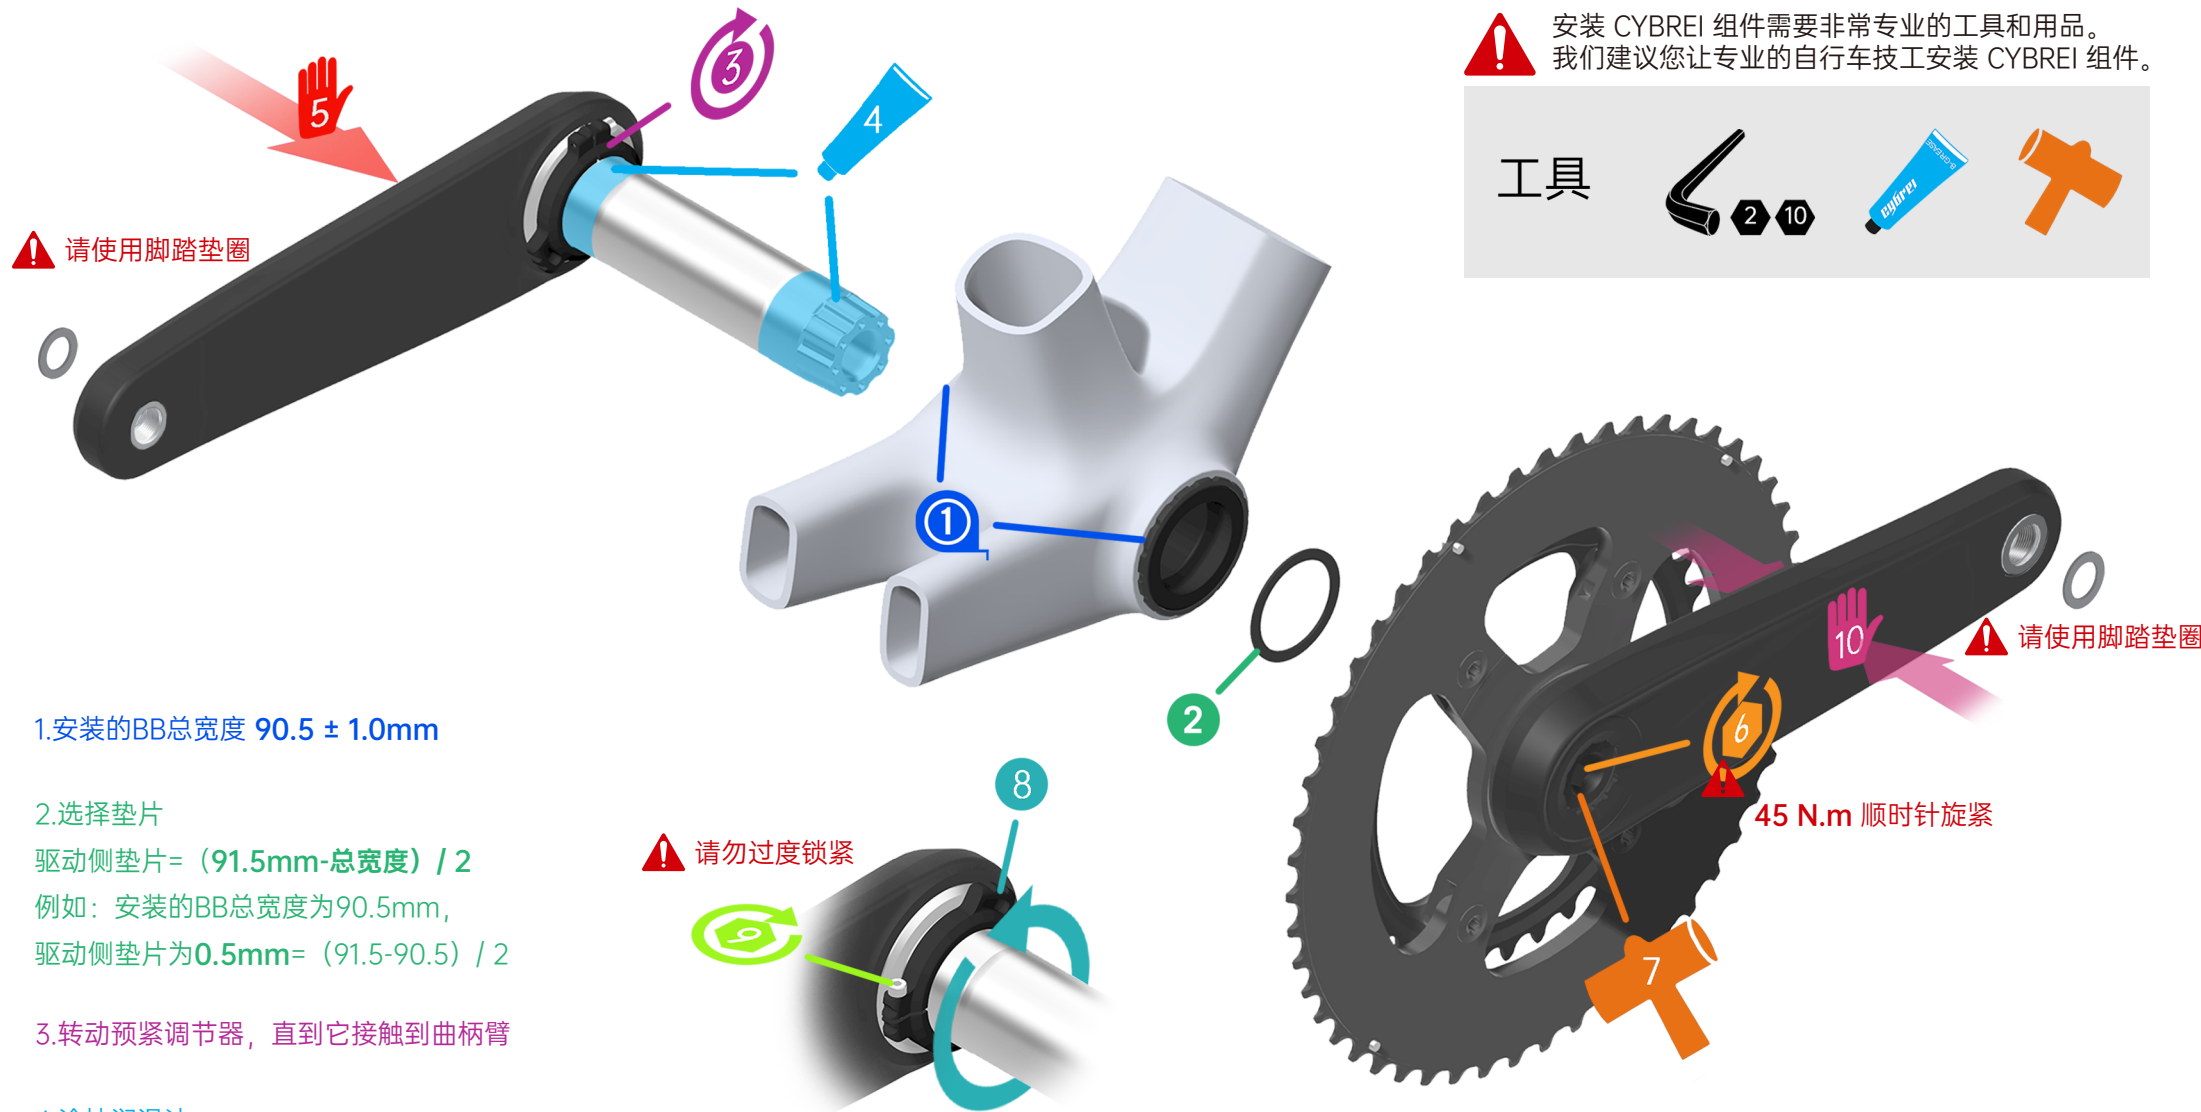

! 请使用脚踏垫圈

! 请使用脚踏垫圈

1. 安装的BB总宽度 $90.5 \pm 1.0\text{mm}$

2. 选择垫片
 驱动侧垫片 = $(91.5\text{mm} - \text{总宽度}) / 2$
 例如：安装的BB总宽度为90.5mm，
 驱动侧垫片为 $0.5\text{mm} = (91.5 - 90.5) / 2$

3. 转动预紧调节器，直到它接触到曲柄臂

4. 涂抹润滑油

5. 装入曲柄和驱动侧垫圈

6. HEX 10mm 45 N.m (33ft-lb) 扭矩

7. 轻轻敲击，使曲柄臂完全就位

! 请勿过度锁紧

8. 手动拧紧预压环以预紧曲柄组

9. HEX 2mm 拧紧预紧预压环螺丝

10. 确保不存在旷量

45 N.m 顺时针旋紧